Roland®

RK-300 Quick Setup Guide

Before using this unit, carefully read the sections entitled: "IMPORTANT SAFETY INSTRUCTIONS", "USING THE UNIT SAFELY," and "Important Notes" in RK-300 owner's manual. These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

Copyright © 2008 ROLAND CORPORATION
All rights reserved. No part of this publication may be reproduced in any formwithout the written permission of ROLAND CORPORATION.

5100003345

When using the KSC-48 dedicated stand (sold separately)

Setup

1 Assemble the stand as described in the assembly instructions included with the stand, and place the RK-300 on the stand.

2 Connect the supplied power cord to the AC IN jack on the RK-300's rear panel, and connect the other end to an AC outlet.

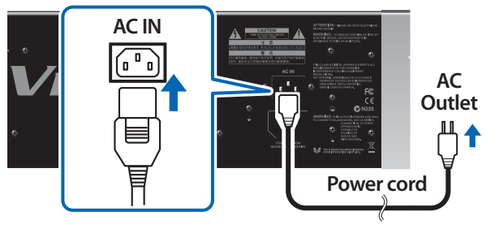

3 Connect the cord of the included piano pedal to the PIANO PEDAL connector on the RK-300's rear panel.

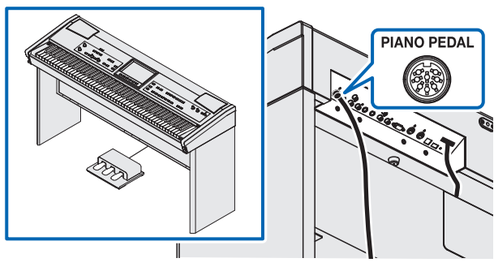

Attaching a CD Drive

1 Set the CD drive's select switch to "AUTO."

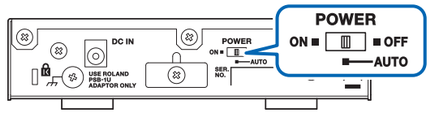

2 Attach the installation holder to the CD drive.

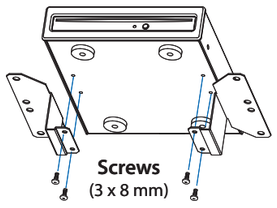

3 Attach the CD drive using the holes on the bottom of the RK-300, as shown in the illustration.

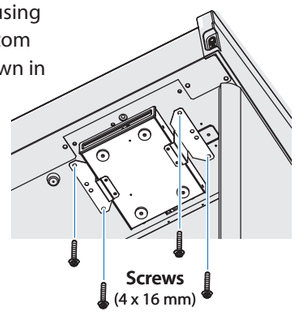

4 Use a USB cable to connect the CD drive's USB connector to the EXT DRIVE connector on the RK-300's rear panel.

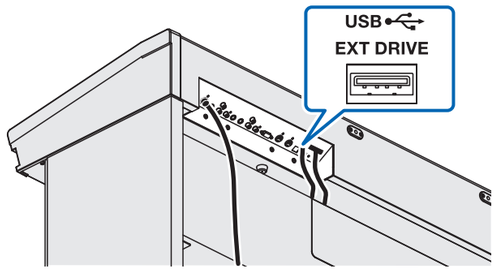

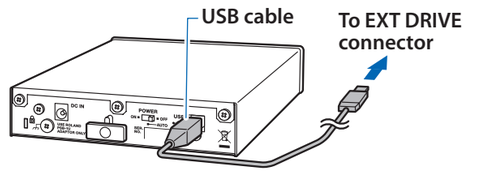

5 Connect the AC adaptor included with the CD drive to the CD drive's DC IN jack, and plug the AC adaptor into an AC outlet.

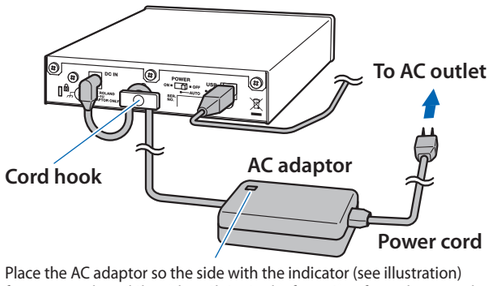

Place the AC adaptor so the side with the indicator (see illustration) faces upwards and the side with textual information faces downwards. The indicator will light when you plug the AC adaptor into an AC outlet.

When using the KS-G8 stand (sold separately)

Setup

1 Assemble the stand as described in the assembly instructions included with the stand, and place the RK-300 on the stand.

2 Connect the supplied power cord to the AC IN jack on the RK-300's rear panel, and connect the other end to an AC outlet.

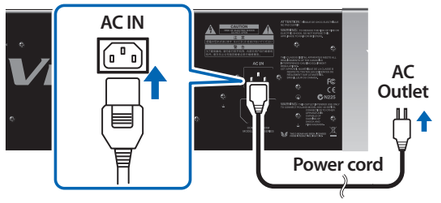

3 Connect the cord of the included pedal (DP-10) to the CONTROL PEDAL jack on the RK-300's rear panel.

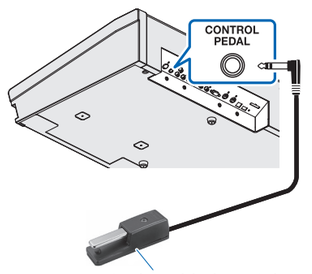

Set the pedal select switch to "Continuous."

Attaching a CD Drive

1 Set the CD drive's select switch to "AUTO."

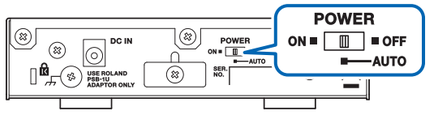

2 Using the CD drive attachment screws, attach the CD drive to the CD tray.

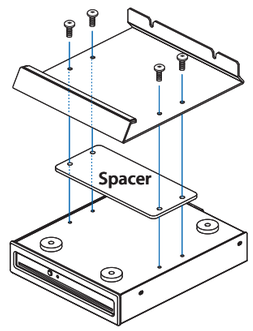

3 As shown in the illustration, loosen the two screws fastening the CD tray on the back of the RK-300.

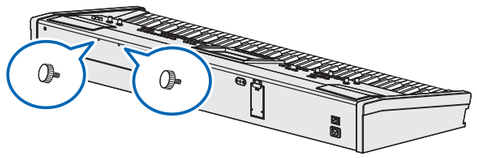

4 Place the CD tray between the screws and the RK-300, and turn the two screws to securely fasten the CD tray.

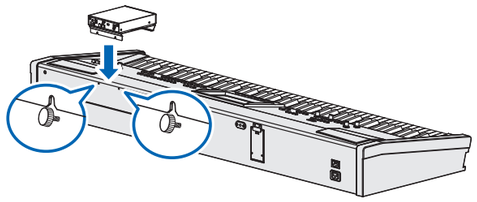

5 Use a USB cable to connect the CD drive's USB connector to the EXT DRIVE connector on the RK-300's rear panel.

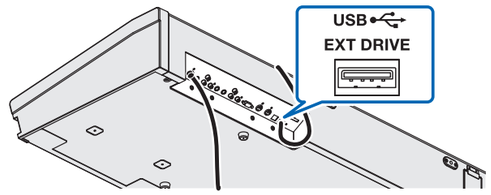

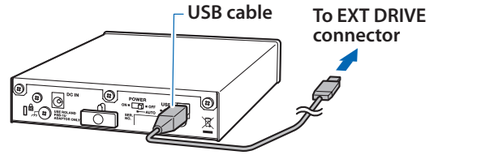

6 Connect the AC adaptor included with the CD drive to the CD drive's DC IN jack, and plug the AC adaptor into an AC outlet.

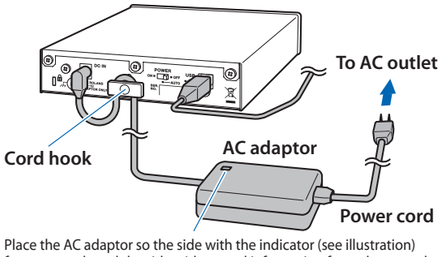

Place the AC adaptor so the side with the indicator (see illustration) faces upwards and the side with textual information faces downwards. The indicator will light when you plug the AC adaptor into an AC outlet.

Turning the Power On

1 Turn the [VOLUME] knob all the way to the left to minimize the volume.

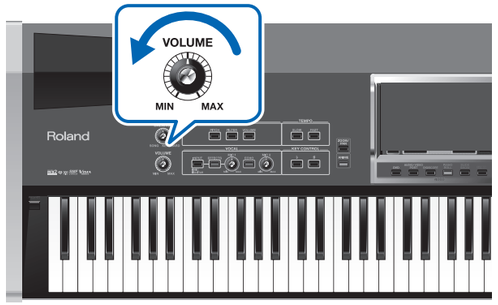

2 Press the [Power On] switch.

The power will turn on, several images will appear in the RK-300's screen, and then the main screen (Owner's Manual p. 24) will appear.

3 Use the [VOLUME] knob to adjust the volume.

Turning the Power Off

1 Turn the [VOLUME] knob all the way to the left to minimize the volume.

2 Press the [Power On] switch.

The screen will disappear, and the power will turn off.

Connecting User Memory

If you connect the included USB memory to the USER MEMORY connector on the RK-300's rear panel, you'll be able to use the USB memory as "User memory."

User memory is required for basic operations such as the following:

- Saving a recorded performance
- Saving songs, images, and sound settings

1 Press the upper part of the USER MEMORY connector cover, and open it.

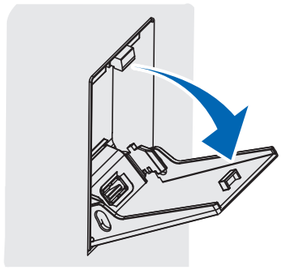

2 Connect the included USB memory to the USER MEMORY connector.

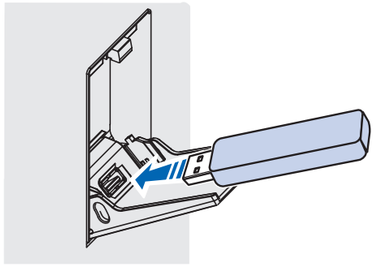

3 Press the upper part of the USER MEMORY connector cover to close it.

Formatting the User Memory

When you've finished connecting USB memory to the USER MEMORY connector, you'll need to format the USB memory so that it can be used as "user memory."

1 Access the main screen.

* If you're not at the main screen, press the [EXIT] button a number of times until the main screen appears.

2 Touch <Menu>.

The Menu screen appears.

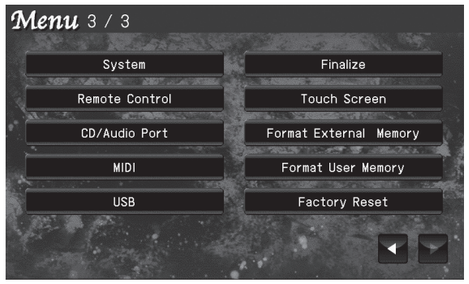

* There are three menu screens.
Touch ◀ ▶ to switch screens.

3 Touch <Format User Memory>.

A confirmation message appears.

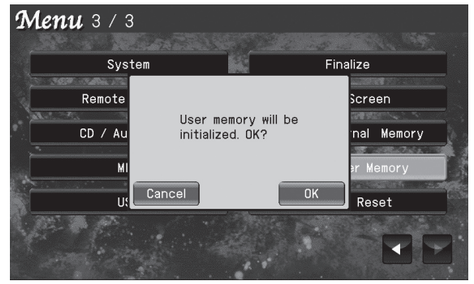

4 Touch <OK>.

Formatting will begin.
The entire contents of user memory will be formatted.

NOTE

Never turn off the power while the screen shows the message "Now formatting ...."

MEMO

If the screen indicates "Error," refer to the "Error Messages" (Owner's Manual p. 209).

Now you're ready to start enjoying the RK-300.

We recommend that you copy the songs on the included CD to the "Favorites" in internal memory (Owner's Manual; p. 36).

Go ahead and select a song you like from the song list, then press the [PLAY/STOP] button to listen to it.